
Methamphetamine Instant Testing Kit Instructions

About This Test Kit

Our rapid meth residue test kits are calibrated to offer preliminary indications of whether methamphetamine contamination levels exceed the Australian standard of 0.5 µg/100 cm² in your property.

These kits are easy to use, and will provide results within 5 minutes however please note that these are indicative tests only, and in the event that a strong positive result is recorded you will need to undertake a full forensic screen of the property which Contam Solutions will be happy to advise you on.

Each Test Kit Contains

- **COTTON BUD:** Sterile bud that is used to collect the sample when wetted on buffer solution.
Use one cotton bud per test
- **BUFFER SOLUTION:** Formulated solution used to help collect meth samples from the surface.
Use one buffer solution tube per test
- **CASSETTE:** The testing device used to determine the presence of methamphetamine residue.
Use cassette per test
- **GLOVES:** A pair of sterile gloves to be worn during sampling to prevent cross contamination
Use a new set of gloves for each test

Instructional Video

Here is an instructional video, that starts at 1.06 minutes, on how to perform a rapid methamphetamine test at home.

[How To Use The Rapid Test Kit](#)

Where To Test

To test correctly you must sample high airflow areas in each room and suggest sampling in these high airflow areas:

Sample areas to consider:

- Tops of window/door architraves: (combination of both)
- Hall/walkway walls and door architraves at shoulder height.
- Walls/hard surfaces located next to Kitchen & Bathroom extraction fans
- Head height of the upright of the window/door architrave on side that opens.
- Internal walls next to either doorframes or windows at shoulder height.
- Bathroom/Kitchen extractor fans

Number Of Samples Per Test

Up to 5 samples per kit can be taken. We recommend that 1 test kit per room is used so as to allow you to identify more easily the rooms that return the presence of methamphetamine.

Notes and Disclaimer:

For use on solid permeant surfaces such as walls, architraves, fans, vents and facias only.

Not suitable for screening of carpets, fabric (or any non-solid surfaces) or freshly painted areas.

The results are for the area screened only, Methamphetamine may still be present in other areas of the room or property.

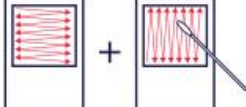
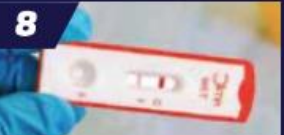
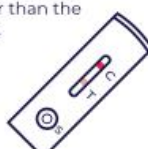
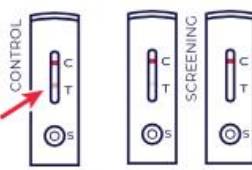
Store between 4-30 degrees out of direct sunlight and not in fridge.

Please dispose of kit responsibly and out of the reach of children.

In the event that a test returns a result of a medium or strong positive please contact Contam Solutions to discuss your results and options.

SCREENING AN AREA

Nitrile gloves are to be used between each screening test conducted to eliminate the possibility of cross contamination.

1  Place a template card on surface to be screened. 	2  Unscrew the blue top from the buffer solution bottle and using the wand, wet the cotton bud in the buffer solution or dip cotton bud into the bottle to wet. 	3  Using the side of the cotton bud, gently wipe the bud on the testing surface, making sure to swab the entire area inside the template square, as shown in the diagrams below 
4  Re-immers the cotton bud in the buffer solution rotating the stem of the cotton bud between the fingers for ten seconds. Remove the cotton bud. Repeat step 3 & 4 if needed. 	5  Replace the blue lid on the buffer solution bottle tightly & shake thoroughly for 20 seconds. 	6  Take the cassette out of the wrapping & place on a level surface. (disregard other items inside packaging of cassette). 
7  Unscrew the white cap off the top of the blue bottle. GENTLY squeeze the bottle and add four drops of the buffer solution to the cassette in are marked "S" at 5 second intervals between drops. 	8  Wait until the red lines appear - Between 30 seconds and 5 minutes. The T line will be lighter than the C Line 	9  Now compare the screening test just completed to the control test. 
10 	If the "T" line appears fainter in any way compared to the Blank tests "T" line, further laboratory testing is recommended. <i>If the "T" line does not show at all, this means the level of Methamphetamine found on the sampled area is higher than 0.5ug and further laboratory testing is required. Call 1800 522 837.</i> <i>If no "C" line shows, the test is invalid.</i>	